

Right-Hand Fryer Operation Supplement Single Basket Lift Configuration

This supplement section describes Timer and Basket Lift operational differences for the Single Basket Lift configuration on the right-hand Fryer unit.

 
The right Fryer has been modified to utilize only a single Automatic Basket Lift, designed to function with a single large-size basket. The Left Basket Timer on the Controller has been re-configured so that it properly activates this single right-side Lift.

This configuration provides eight (8) programmable menu timers for the single basket of the right-hand Fryer.

- Programming procedures for the right-hand Fryer controller are the same as described in the Fryer Operation Manual.
- Selecting menu presets for cooking is the same as described in the Fryer Operation Manual. Select Left Basket Timer if you wish run one of the presets assigned to one of these four (4) keys or select Right Basket Timer if the desired time has been assigned to one of these keys.



- Start the cook cycle as described in the Fryer Operation Manual.
- Either timers will automatically raise the single Basket Lift at the end of the cook cycle.
- Pressing either Basket Lift Selection Key will enable the single Basket Lift. The arrow keys can then be used to manually raise or lower the lift.



IMPORTANT: If the lift is in motion, **DO NOT** press the other Selection Key followed by one of the arrow keys. Doing so will lock up the lift. Should this happen, cycle the Controller power to reset.